


How to change a Multivalve On/Off Tap

CYLINDER MUST BE EMPTY OF GAS BEFORE CHANGING THE ON/OFF VALVE.



- 1/ Open on/off valve fully.
- 2/ Remove white disc from the end of the yellow tap with a pointed implement.
- 3/ Unscrew the screw that retains the yellow handle on the valve.
- 4/ Pull the yellow knob off the brass valve shaft.
- 5/ With the yellow knob removed use a 17mm spanner (see below) on the valve nut, turning anticlockwise to withdraw the on/off valve body from the multivalve body.

17mm Nut

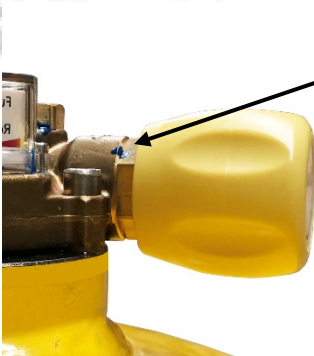

- 6/ The replacement valve can now be fitted to the Multivalve, before attempting this the replacement valve must be in the fully open position to enable the valve to fully locate into the Multivalve.
- 7/ Using the 17mm spanner install the valve into the body on the Multivalve, ensuring that the valve is tightened to 7 Nm minimum.
No sealant must be used on the new valve as this is sealed with a 'O' ring.

